

BELT REPLACEMENT



CAUTION



Never use the snowblower without the belt guard.

BELT REPLACEMENT:

For belt part number, refer to parts breakdown section for parts identification.

- a) Remove the belt guard (item 1) by removing the three hex bolts 1/4" x 1/2" (item 2).
- b) Remove the tension from the belt by pushing on the switch for the belt tensionner.
- c) Remove the old belt from the engine pulley (item 3).
- d) Activate the switch for the electric motor for the belt tensionner to release the brake (item 4).

NOTE: This step is necessary to free the belt from the snowblower pulley.


- e) After installing the belt, you may run the engine without the belt guard but only to verify the belt alignment. Do not leave the snowblower without supervision. Neither you or anyone else must approach the moving parts. Engage and disengage the snowblower to verify if the belt is well aligned, especially on the idler pulley (item 5).

Make sure to hold the switch long enough so that the pulley sits well on the belts.

If necessary, you can add or remove a flat washer on the idler pulley for final adjustments.

- f) Reinstall the belt guard.

IMPORTANT: make sure the belt does not rub on the belt guide (item 6) when the belt is engaged.

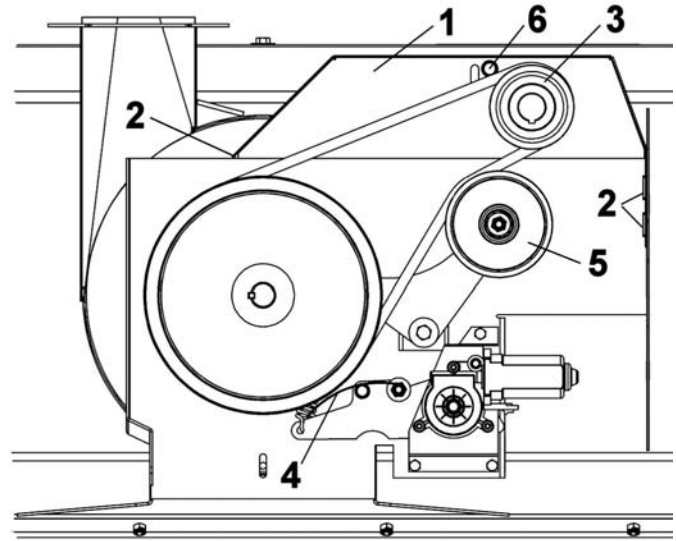

Belt replacement