

# MAINTENANCE

Refer to parts breakdown section for parts identification.



## WARNING



### TO PREVENT INJURIES:

Stop the motor.  
Apply parking brake.  
Remove the ignition key.  
Disconnect the wire from the spark plug(s) and keep away from spark plug(s) to prevent accidental starting.



## CAUTION



### TO PREVENT INJURIES:

-Check mounting bolts at frequent intervals for proper tightness in order to prevent costly repairs.  
-Make sure your snowblower is in safe working condition.  
-Provide adequate blocking before working under snowblower when in raised position.

## ADJUSTMENTS

### SKID SHOE ADJUSTMENT:

Level Paved Surface: Adjust skid shoes to obtain 3/16" to 1/4" clearance between cutting edge and surface.

Uneven or Gravel Surface: Adjust skid shoes to obtain 1/2" to 5/8" clearance between cutting edge and surface.

## LUBRICATION

Apply oil at all pivot points.

### Chute Rotation System:

Oil chute base, rotation worm when necessary.

### Gear box:

Check the oil annually. If necessary, add AGMA 5 EP or SAE 90 oil.

The gear box should have a total of 155 ml of oil or filled to the rim of the bolt hole when installed on the snowblower.

## CUTTING EDGE MAINTENANCE

Verify from time to time the wear on the cutting edge to make sure you do not wear out the base of the snowblower's frame. This cutting edge is reversible.

## CLEARING A CLOGGED DISCHARGE CHUTE:



## WARNING



### TO PREVENT INJURIES:

-Do not attempt to clear plugged chute, auger or fan of snow while vehicle engine is running.  
-Disengage attachment.  
-Lower attachment onto ground.  
-Set the parking brake.  
-Stop engine, remove the ignition key, disconnect the wire from spark plug(s) and keep away from spark plug(s) to prevent accidental starting.  
-Make sure all moving parts have stopped.  
-Do not use hand to unplug chute.  
-Use a 36" (924 mm.) minimum length stick or board.

## AUGERS AND FAN SHEAR BOLT REPLACEMENT

Shear bolts are to be considered a preventive measure and not an assured protection. Operator vigilance is required. Thoroughly inspect the areas where the snowblower is to be used and remove all foreign objects.

### To avoid damage to the snowblower:

Use only the original shear bolts (grooved bolts).

#104000 in bags of 10 for the augers.

#103999 in bags of 10 for the fan.

The use of any other shear bolt will not insure any protection and may void the warranty.

**IMPORTANT:** It is very important to replace the augers in the same position as shown in the drawing before installing the shear bolts.

