

## DISMOUNTING & STORAGE

### SNOWBLOWER DISMOUNTING



### CAUTION



**The belt tension is spring loaded & needs to be held firmly while displacing to prevent injury.**

- a) Remove the belt guard.
- b) Remove the spring.
- c) Unhook the pulley block from the snowblower.
- d) Release the tension on the belt by displacing the tension arm backwards. Remove the belt from the drive mechanism pulley under the tractor.
- e) Disconnect the electric connectors.
- f) Remove the snowblower by activating the latch of the female hitch and by backing up the vehicle.
- g) Reinstall the belt guard.

### STORAGE

- a) Clean snowblower thoroughly and repaint all parts from which paint has worn.
- b) List the replacement parts that will be needed to be replaced before the next season.
- c) Follow the instructions in the Lubrication section.
- d) Store the snowblower, subframe and drive mechanism in a dry place.



### WARNING



**Never use the snowblower without the belt guard.  
Never operate the vehicle with the counterweights in place without the snowblower.**