

OPERATION



WARNING



Read the tractor Owner's Manual carefully. Be thoroughly familiar with the controls & proper use of the attachment.

RAISING OR LOWERING THE SNOW BLADE:

Familiarize yourself with the winch control.
Lift and lower the snow blade using the switch.

ADJUSTING THE ANGLE OF THE SNOW BLADE:

The handle that allows to adjust the angle of the snow blade is located on the left hand side of the tractor, close to the steering wheel. To adjust the angle, turn the handle counter-clockwise to unlock the latch. Push or pull the handle to adjust the blade to the desired angle.

TRIP SPRING SYSTEM:

The snow blade was designed to topple forward when striking solid objects. Once the blade clears the obstacle, it will spring back to its normal operating position, therefore, protecting the operator and tractor from any impacts that might occur.

MAINTENANCE & DISMOUNTING & STORAGE

Refer to parts breakdown section for parts identification.



WARNING



TO PREVENT INJURIES:

Stop the motor.
Apply parking brake.
Remove the ignition key.
Disconnect the wire from the spark plug(s) and keep away from spark plug(s) to prevent accidental starting.

STORAGE

- Clean thoroughly and repaint all parts from which paint has worn.
- List the replacement parts that will be needed to be replaced before the next season.
- Store the snow blade in a dry place.

MAINTENANCE:

- Verify the mounting bolts at frequent intervals for proper tightness in order to prevent costly repairs. Make sure that your equipment is in safe working condition.
- Lubricate all pivoting points.

SNOW BLADE DISMOUNTING:

- Remove rear counterweights.
- Straighten and lower the snow blade. Remove the hair pin from the handle and remove the handle.
- Detach the snow blade by activating the latch of the female hitch.